


FIG. 1

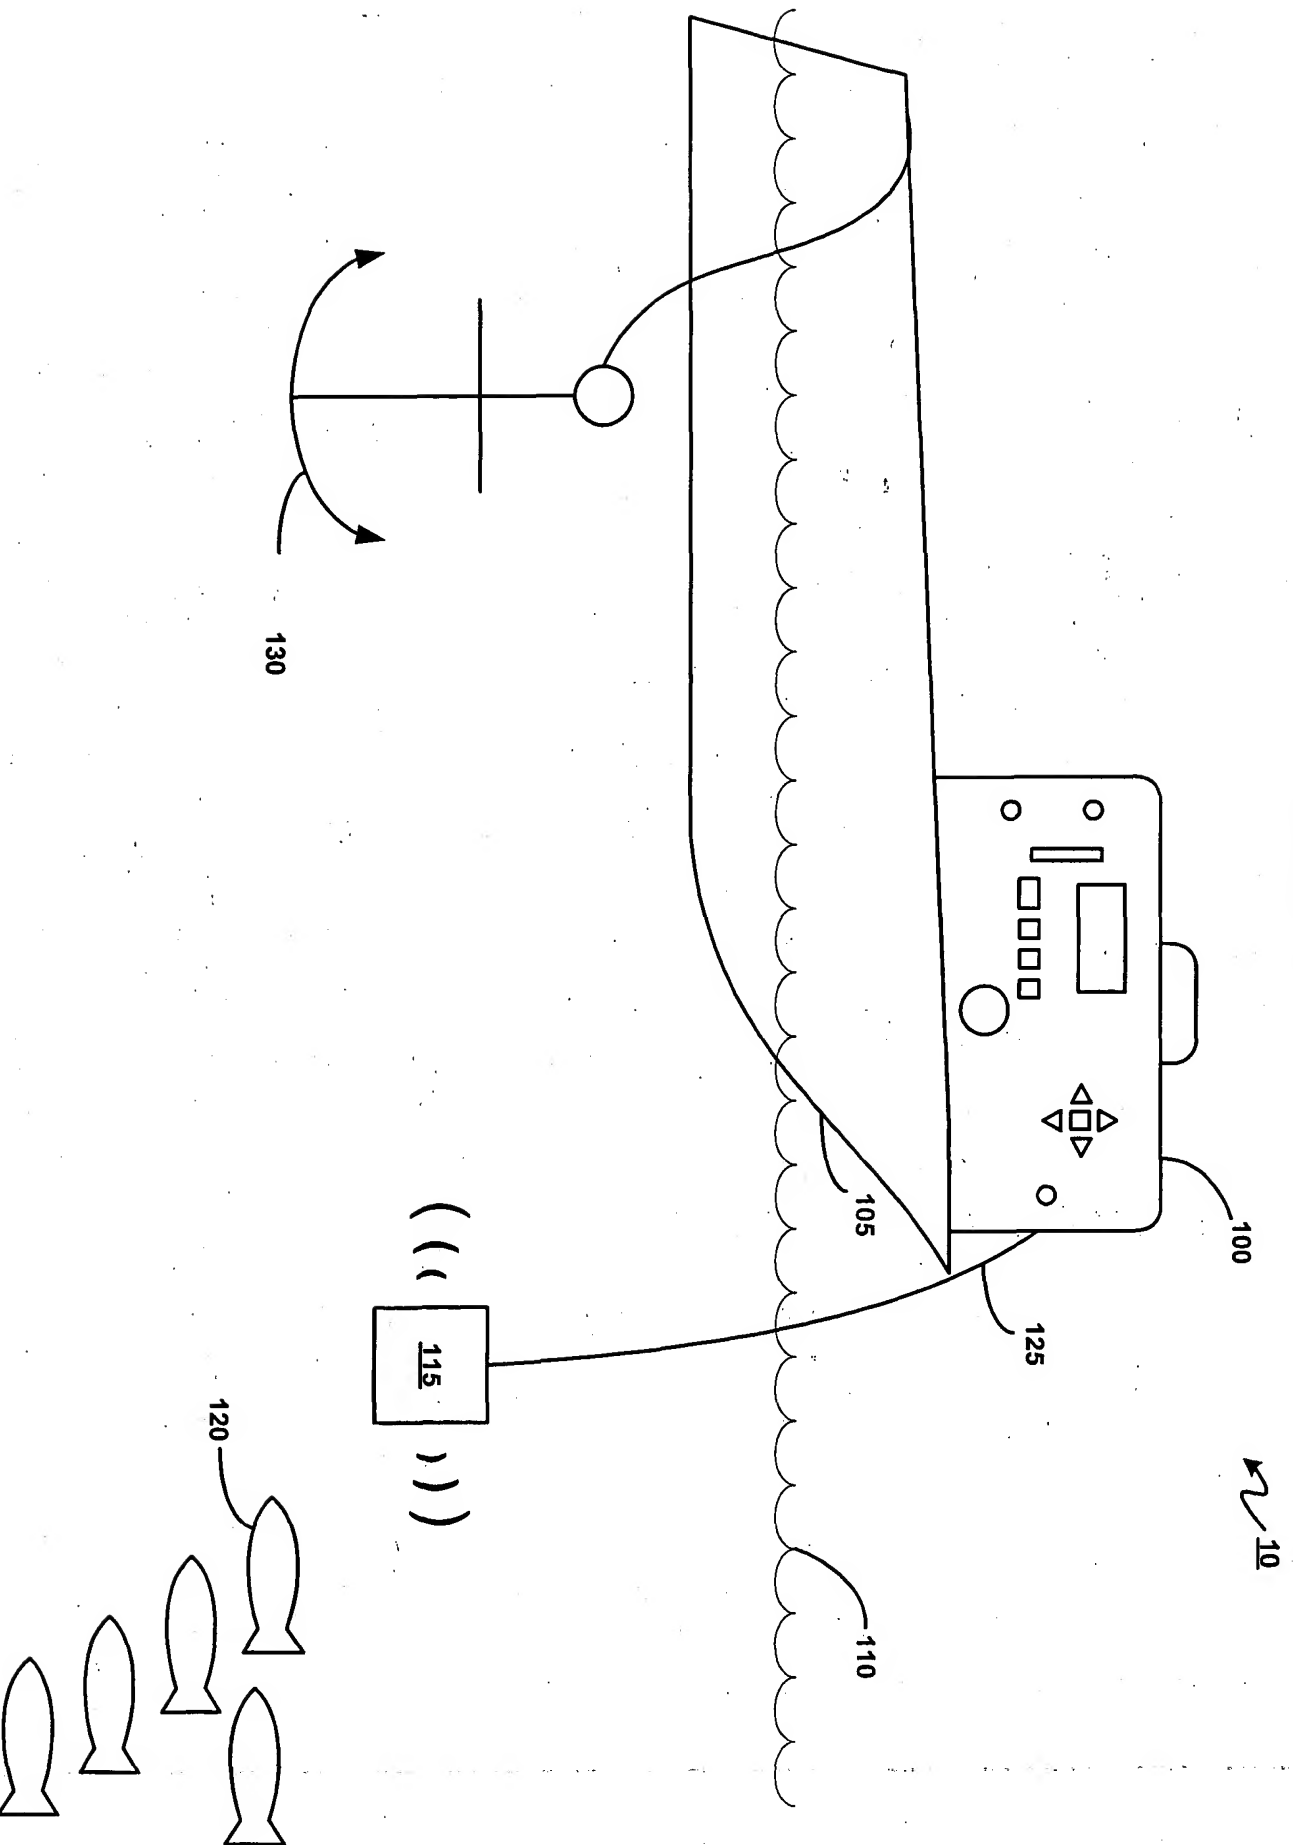

100

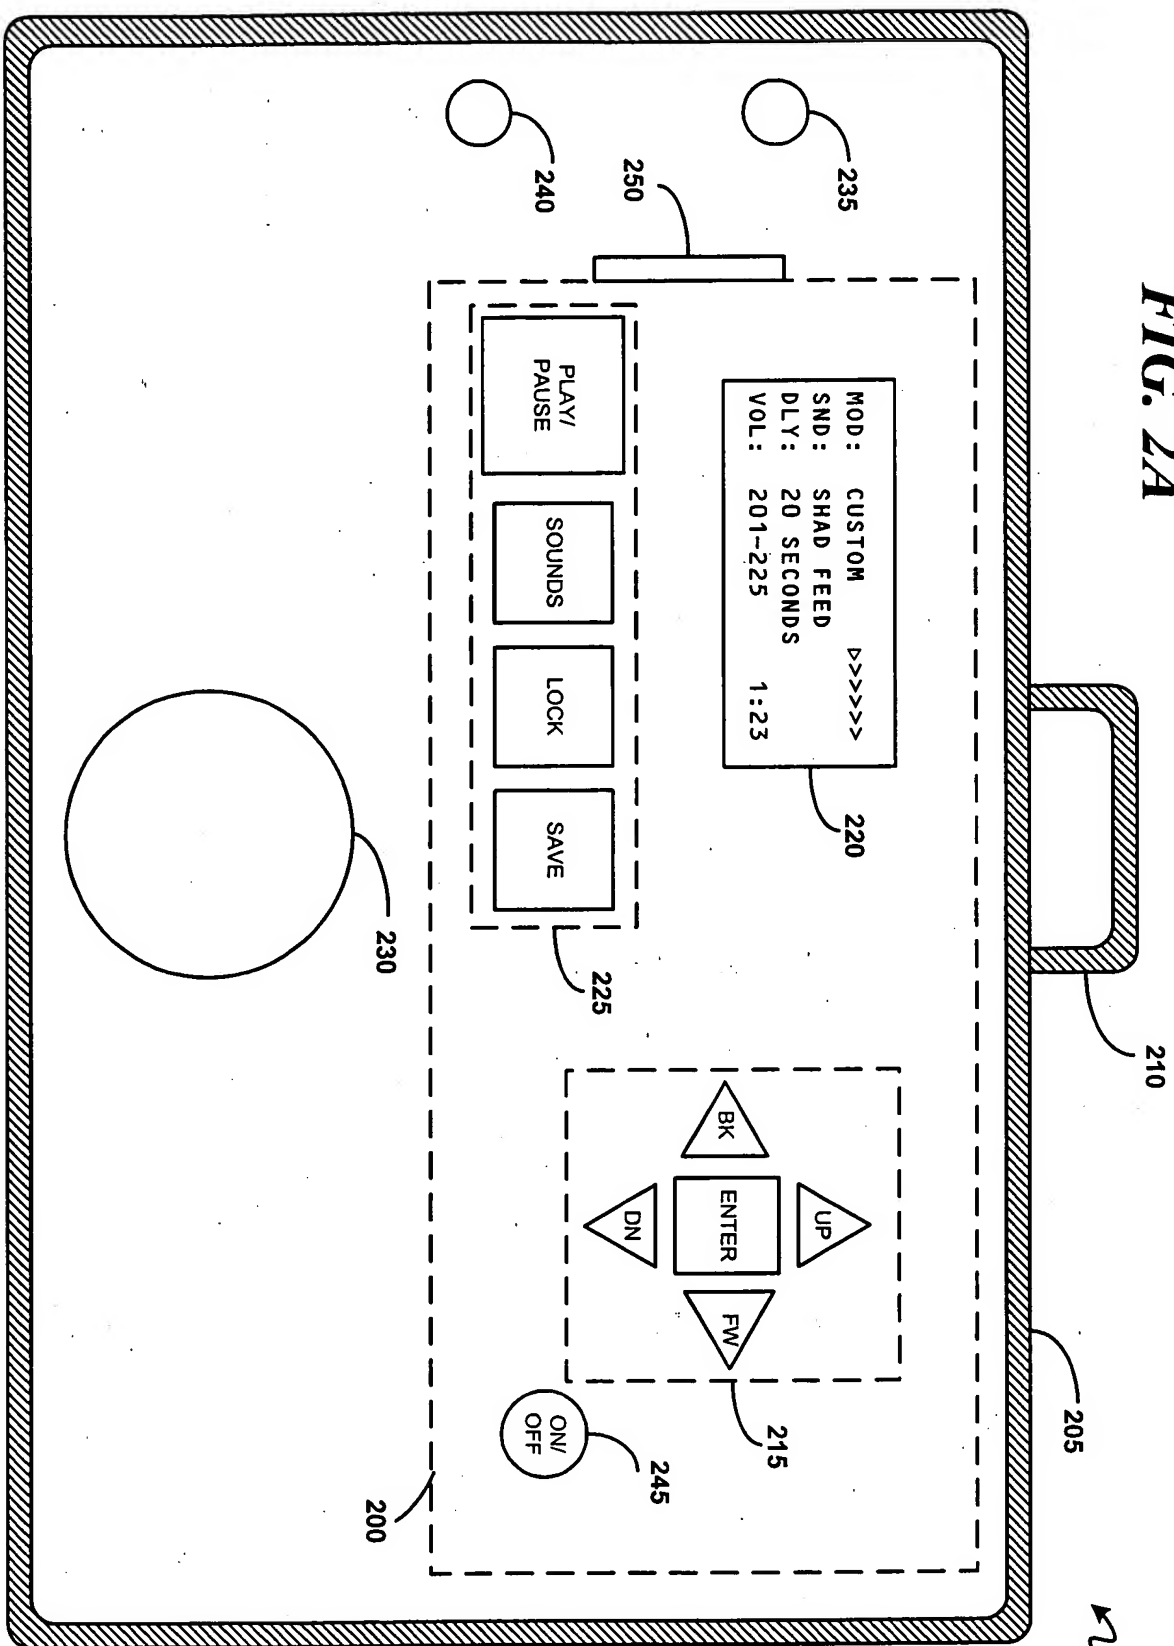


FIG. 2B

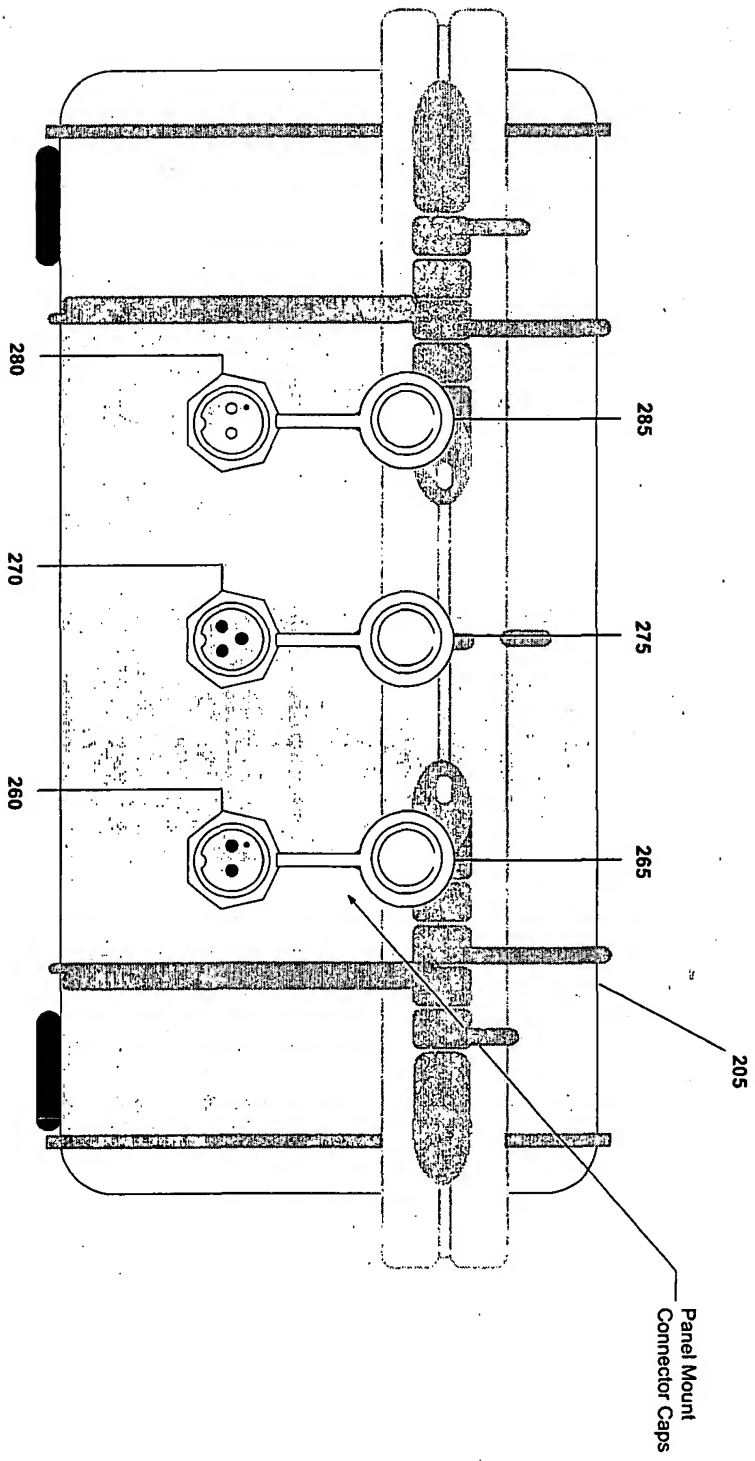


FIG. 3

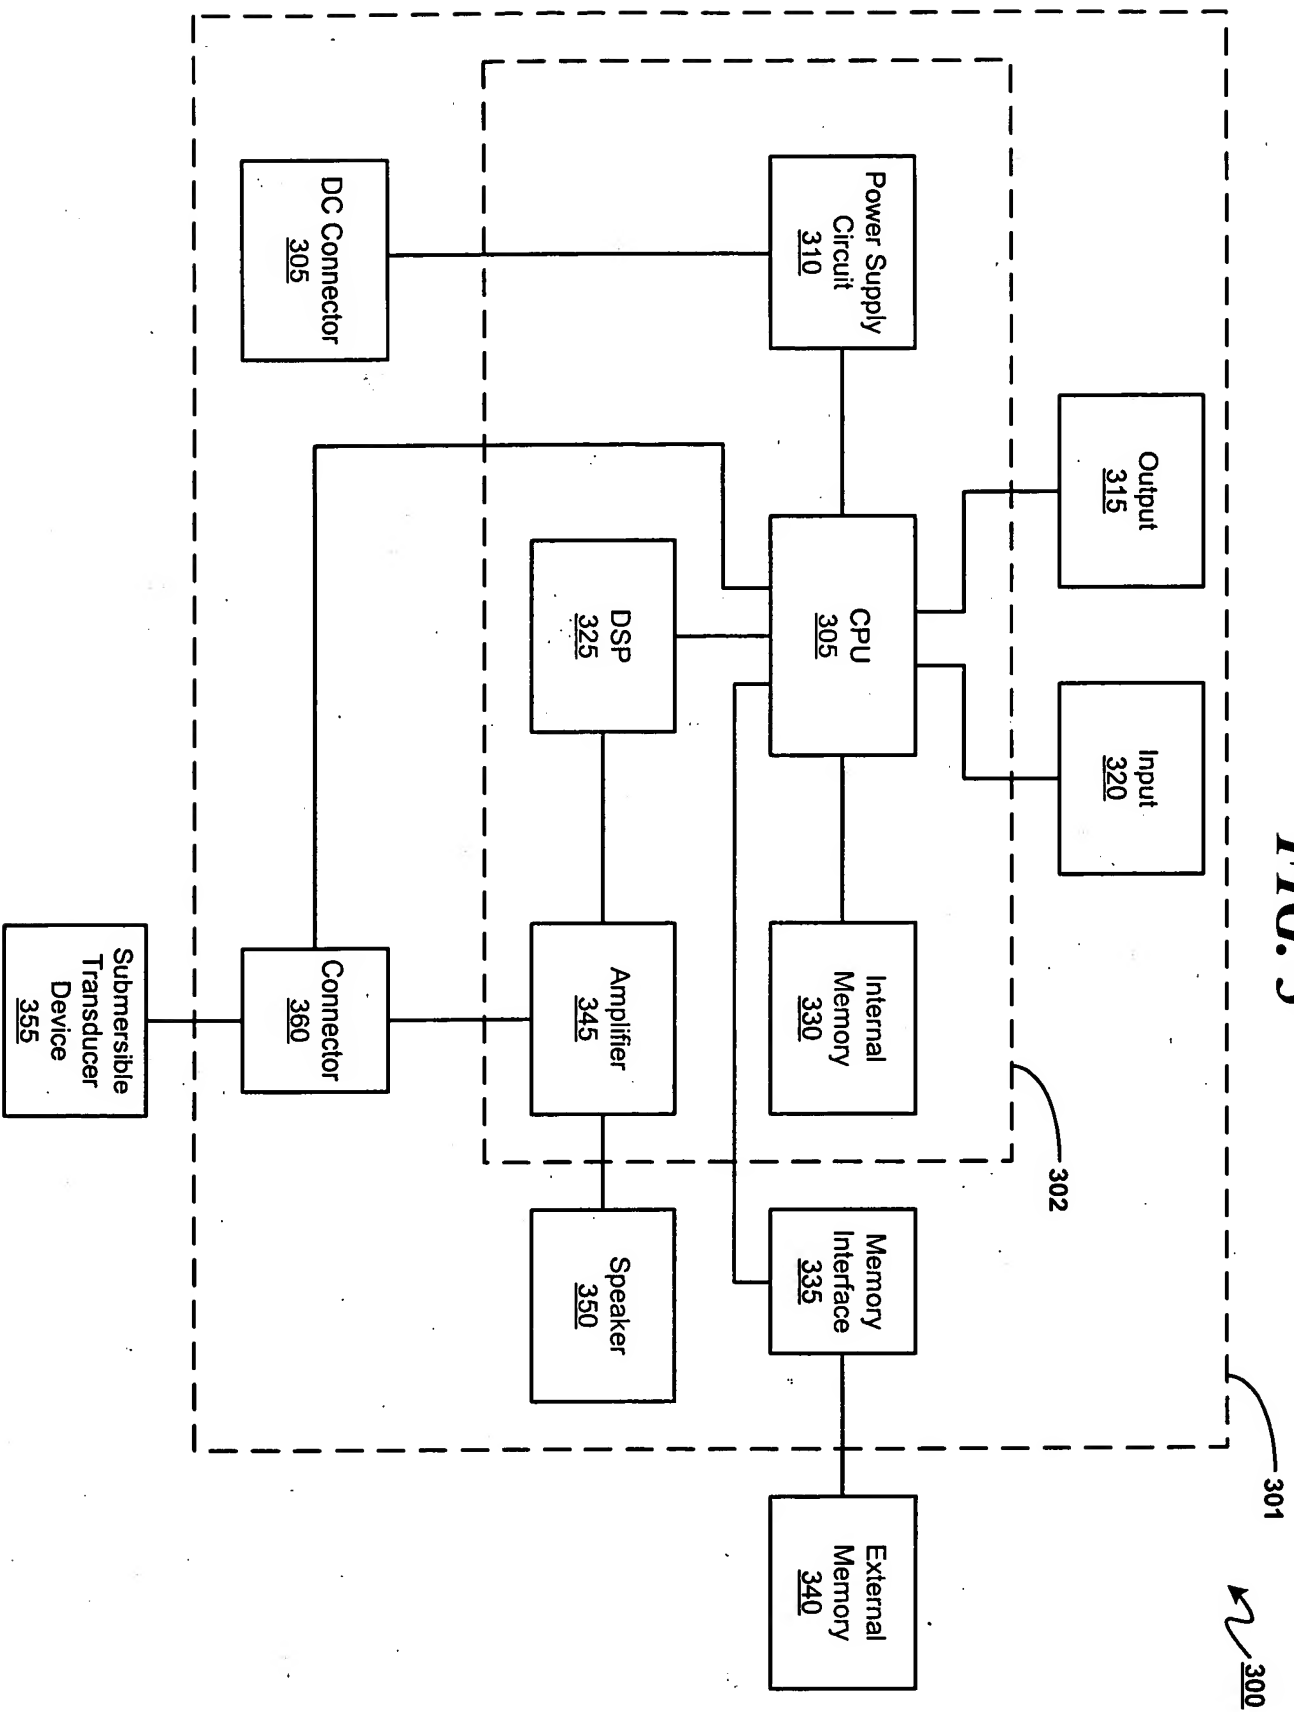


FIG. 4A

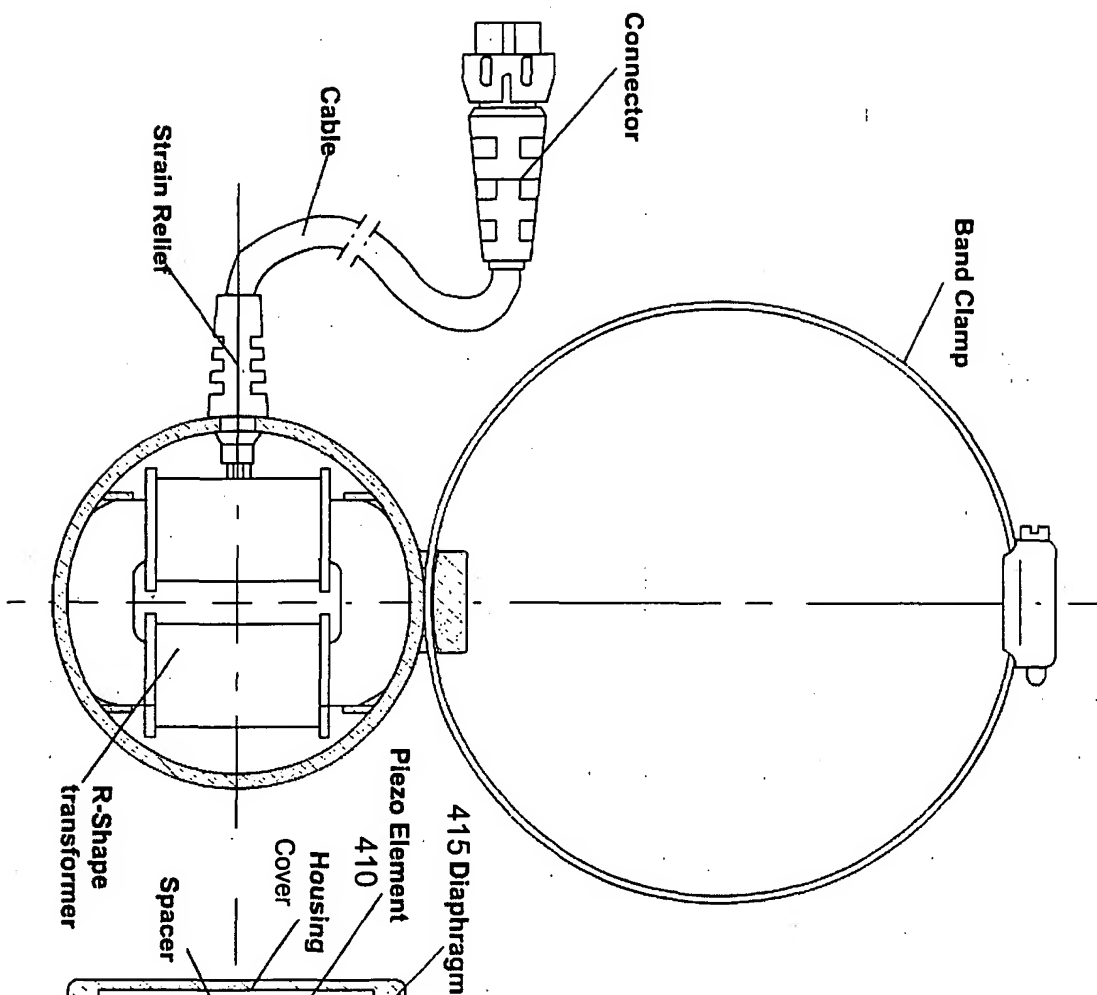


FIG. 4B


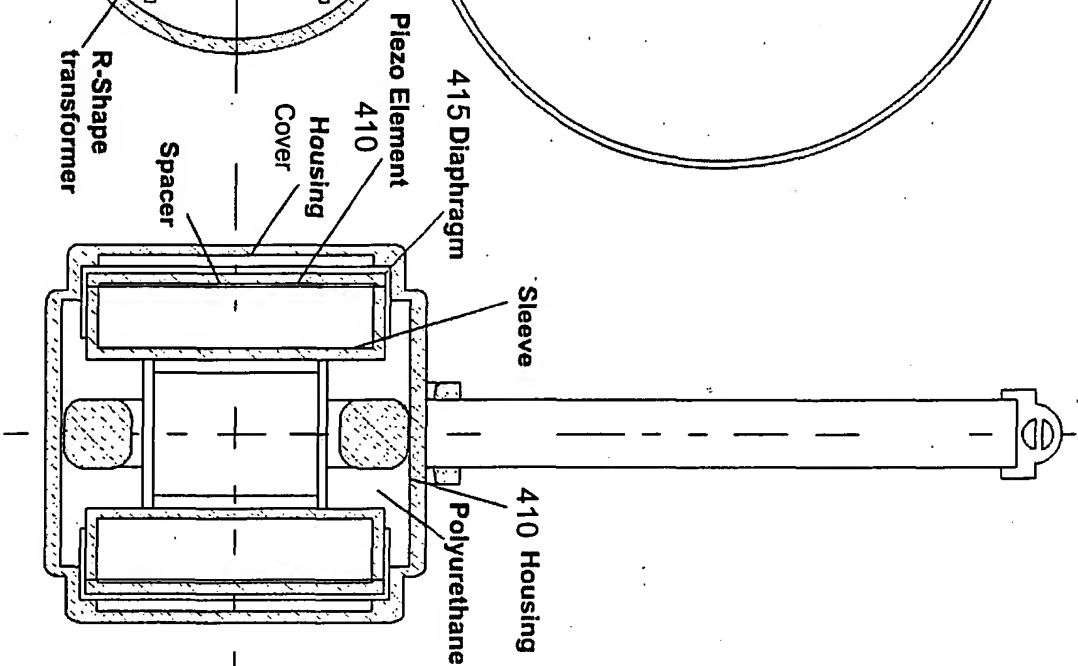



FIG. 5

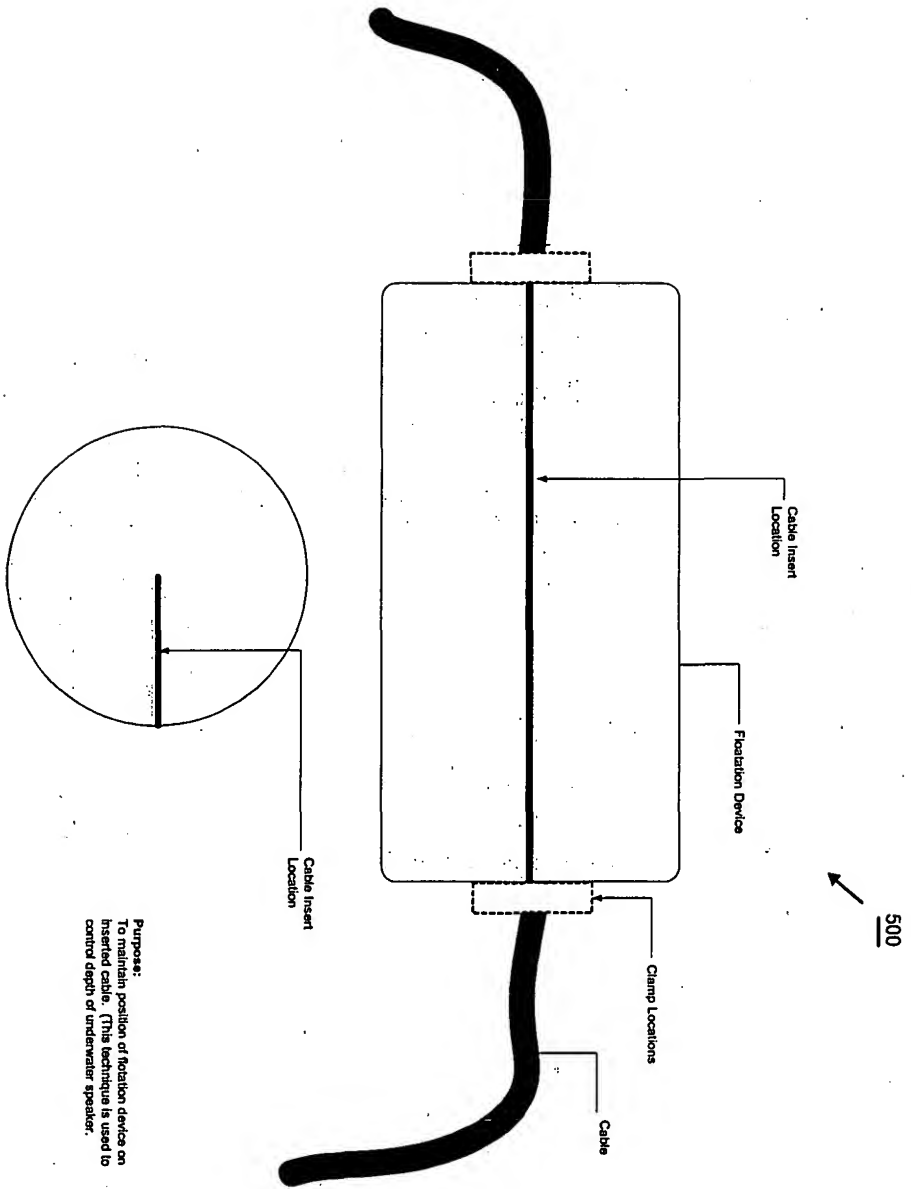

Purpose:
To maintain position of floatation device on inserted cable. (This technique is used to control depth of underwater speaker.

FIG. 6

Normal, Play All, Load and Save Procedures

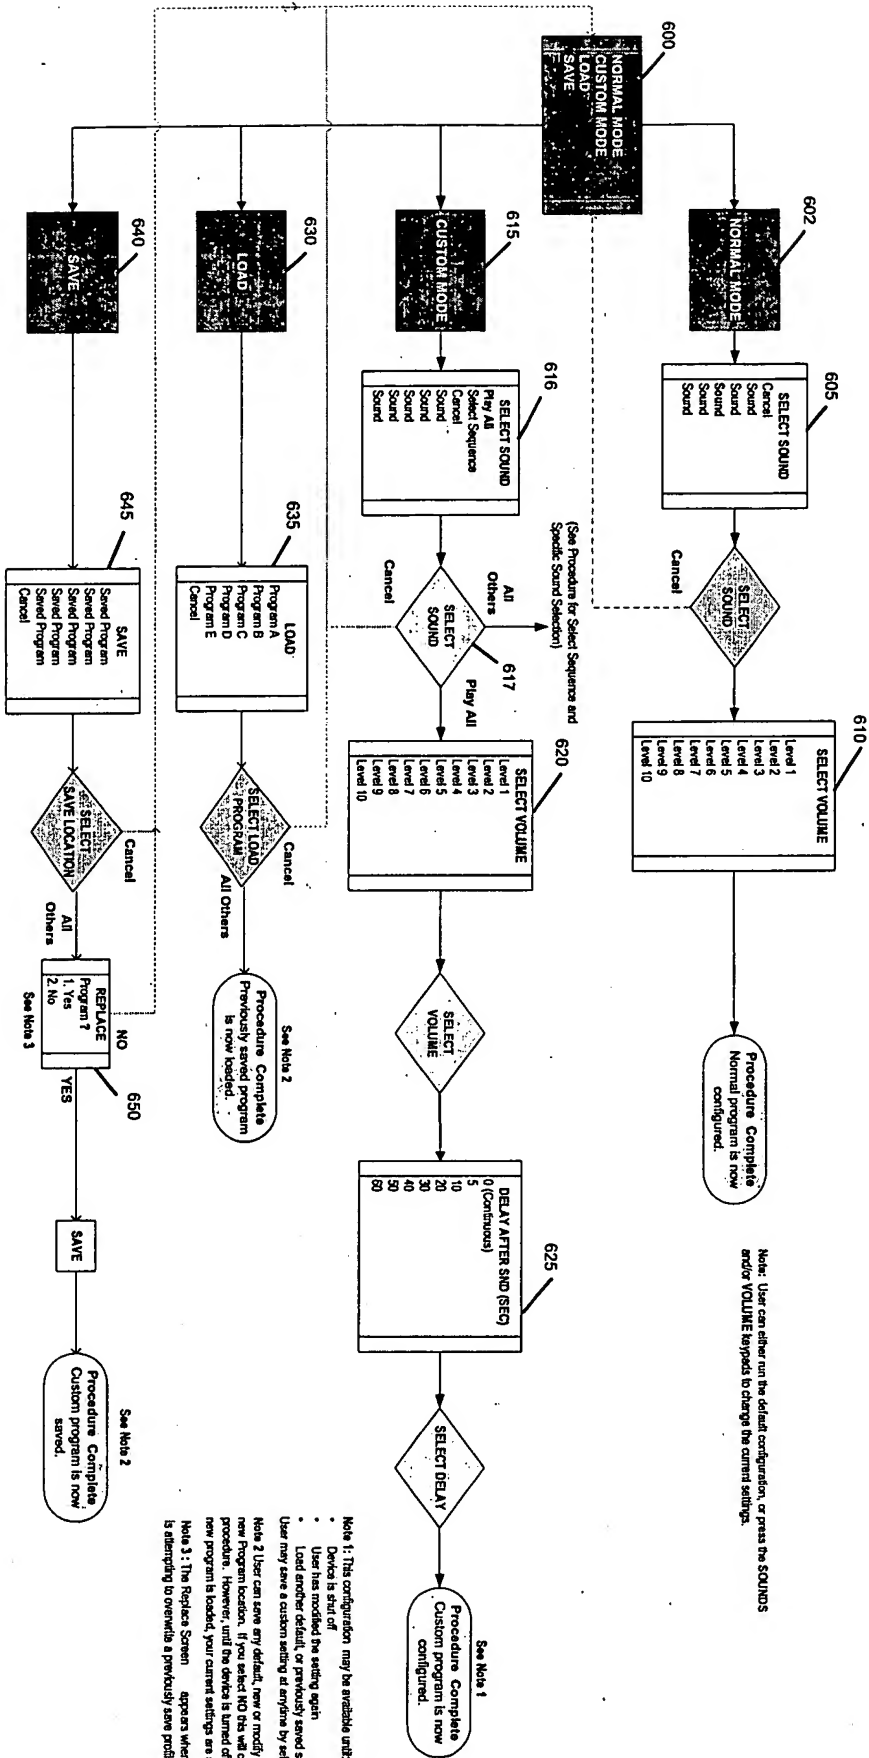

Note 1: This configuration may be available until:

- Device is shut off
- User has modified the setting again
- Load another default, or previously saved setting.
- User may save a custom setting at anytime by selecting the SAVE key.

Note 2: User can leave any default, new or modify settings to a new program location, if you select NO this will cancel the store procedure. However, until the device is turned off, modified, or a new program is loaded, your current settings are still active.

Note 3: The Replace Screen appears when the user is attempting to overwrite a previously save profile.

Select Sequence & Selecting One Sound Procedures

